

Handling-Shortinstruction for

AC adapter




Important instructions:

Please read user instructions before use. Always observe these instructions.

This unit should be only operated at an ambient temperature between 0°C to 45°C up to 95% relative humidity, no condensation.

Mounting the primary plug

The primary plug is interchangeable. This allows a worldwide use. The procedure of changing the plugs is as per the pictures.

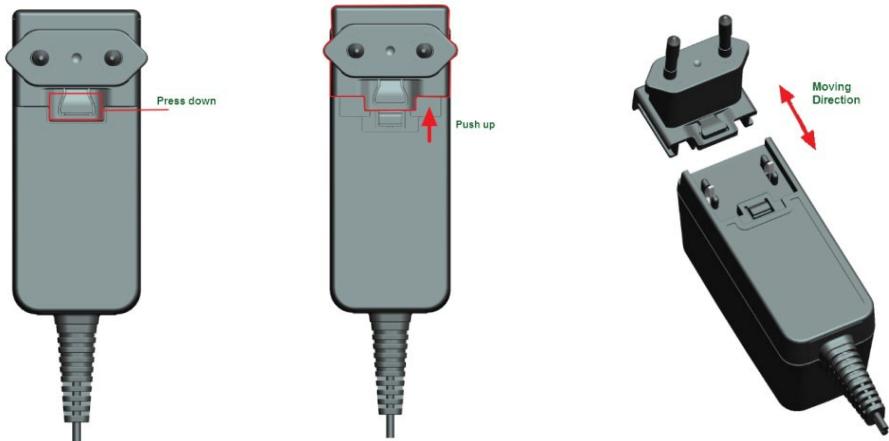

Pinning:

Red wire end ferrule:
Black wire end ferrule:

+24V DC
0V (Ground)

Under the web-address <https://www.process-informatik.de> are product specific documentations or software-driver/-tools available to download.
If you have questions or suggestions about the product, please don't hesitate to contact us.

Process-Informatik Entwicklungsgesellschaft mbH

Im Gewerbegebiet 1

DE-73116 Wäschchenbeuren

+49 (0) 7172-92666-0

info@process-informatik.de

<https://www.process-informatik.de>

Copyright by PI - 2026

Menutree Website:

- + Products / docu / downloads
- + Accessories
 - + Connector / Power supply
 - + AC adapter




QR-Code Website:




Please make sure to update your drivers before using our products.

Logged data to FTP-server

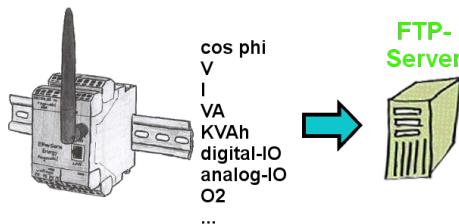


Do you need the logged data not locally but on your site? Then just turn on recording on an FTP-server and the data is stored. You can then immediately read and process this data.

Logging and analysis of communication data

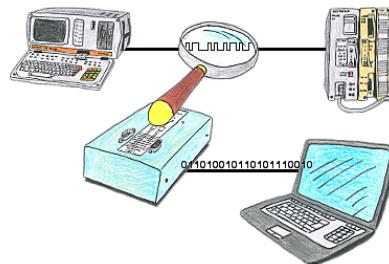

You want check, why your application cant communicate with the PLC or why after some time past the communication will be broken? No problem, integrate the PG-FOX-hardware in this communication way and log through the PG-FOX-software on an PC the sended data in the exact time. So, you can later check the date and find a solution of the problem.

LAN-subscriber to the WiFi

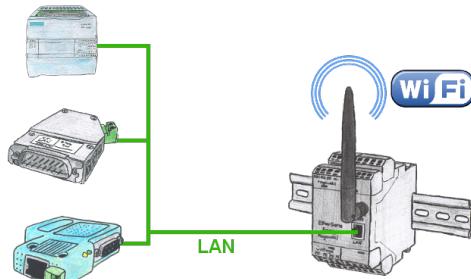

You also need to network devices but dont have locally no ethernet-cable. WiFi is available? With the EtherSens-Bridge you bring immediately all connected wired participants in the WLAN network.

Use on-site without PC-adapter?



With the MPI/PPI/Profibus-modem you can connect serial to your PC/laptop and then communicate directly with the PLC without a PC-adapter or other S7-programming cables.