Under the web-address https://www.process-informatik.de are product specific documentations or software-driver/-tools available to download.

If you have questions or suggestions about the product, please don't hesitate to contact us.

Process-Informatik Entwicklungsgesellschaft mbH Im Gewerbegebiet 1 DE-73116 Wäschenbeuren +49 (0) 7172-92666-0

> info@process-informatik.de https://www.process-informatik.de

Menutree Website:

QR-Code Website:

- + Products / docu / downloads
 - + Accessories
 - + Antennas / Accessories
 - + Sector antenna for ALF







Please make sure to update your drivers before using our products.

Connecting S7-/S5-PLCs without head-station



Pair your S7 directly with your S5, thanks to the active PUT/GET in the S7-LAN no problem.

Each MPI/Profibus-CPU exchanges data directly without using a CP.


No head-control or changes in the S5-PLC needed.

Data backup S5-PLC on SD-card via dig. IO



Via digital input triggered DB-backup/-restore without additional PC via PG-socket and Ethernet to SD-card

PD-interface of the S5-PLC already occupied (OEM-device)

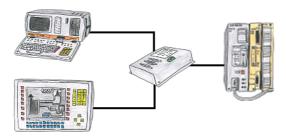


Your PD-interface of the S5-PLC is already occupied with a panel and you should accomplish program modifications without removing the panel? No problem, connect the Multiplexer one-time to the PLC and then connect the panel and also your PC to the Multiplexer. Now you can work parallel with the PLC without the need of affecting the operation of the panel.

Recognize missing Profinet participants




Recognize cable breakage, contact problems and line faults. Retransmissions and failures are logged and reported. Early acting before total failure of the participant.

S7-300/400 (MPI/DP) to S5

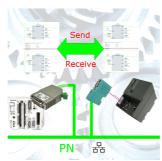

Coupling S7-controller with MPI/Profibus at S5-control with PD-port via network

Access to MPI/Profibus without power supply

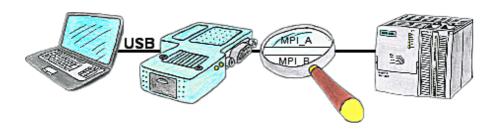

Your're right in the middle of your production line and are standing in front of a passive assembly just like a switcher or a ET200, in that case you won't be able to go Online without an external power supply of your programming adapter, unless you're using the S7USB. This module is supplied completely from the USB-interface.