


## Mounting-instruction ALF-wall-antenna

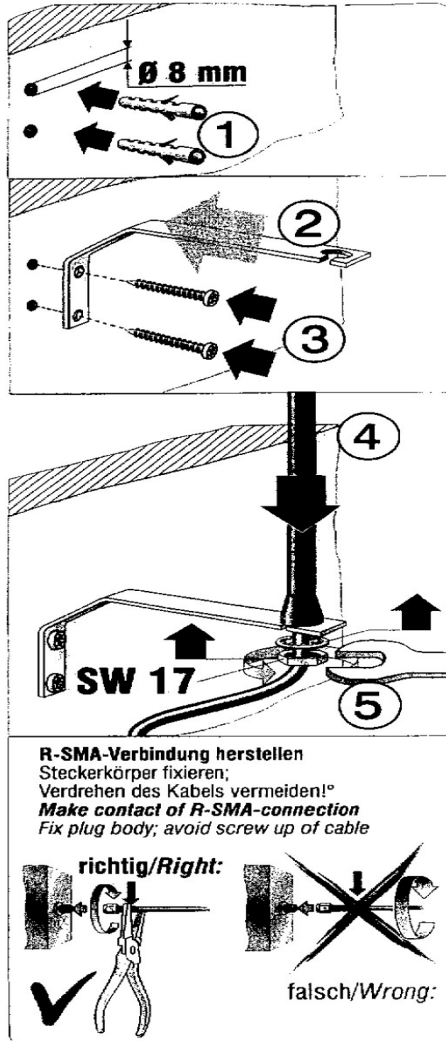

Under the web-address <https://www.process-informatik.de> are product specific documentations or software-driver/-tools available to download.  
If you have questions or suggestions about the product, please don't hesitate to contact us.

Process-Informatik Entwicklungsgesellschaft mbH

Im Gewerbegebiet 1

DE-73116 Wäschenbeuren

+49 (0) 7172-92666-0

[info@process-informatik.de](mailto:info@process-informatik.de)

<https://www.process-informatik.de>

Copyright by PI - 2024

**Menutree Website:**

+ Products / docu / downloads


+ Outdoor-antenna for ALF / S5-/S7-BRIDGE

**QR-Code Website:**




Please make sure to update your drivers before using our products.

## Saving of phone cost through call-back

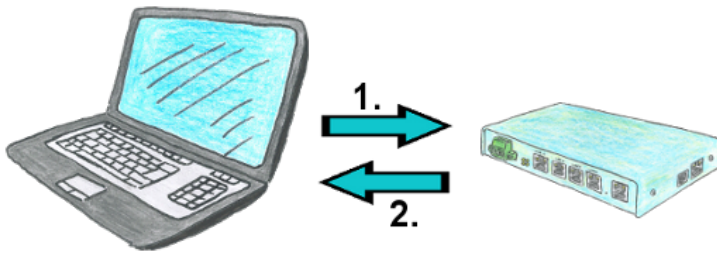

You need a communication over the phone with your operation of facilities, but do not want to pay the phone bills? No problem, with the TELE-router you are able to work even with recall. This means that you first call the device and tell him that you want a call back. If the credentials are correct and the recall is permitted, the TELE-router connection is terminated and then it calls back the transferred number. Your customer shall bear the cost of the connection.


## Interface switch for the S5

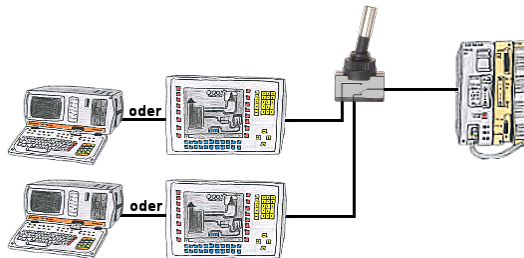

PG-interface of the S5-PLC occupies with a panel and program changes in the controller should be performed? No desire/leisure/possibility to plug permanently between panel and programming-device?


Connect the device from the PG-switch-series to the S5-PLC as well as panel and programming-device, and you decide who from the two participants (PANEL or PG) with the control communicates. Whether with toggle-switch (PG-SWITCH) or with 24V DC (PG-SWITCH-II) or permanently connected by preceding [PANEL and PLC permanently connected, communication is running; As soon as PG is plugged into PG is also switched; disconnect PG and panel has access] (PG-SWITCH-III), switching to your requirements and no permanent change.

Watching of S5-PLC's via LAN without Ethernet-CP
--

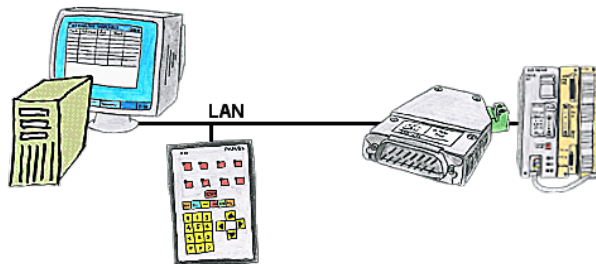

Your panel only has a LAN-socket as PLC-interface, no problem. Connect this socket with the S5-LAN++ and plug it directly on the PD-interface of the PLC. Then access to the variables and data of the PLC is already available.

Standardised time
-------------------

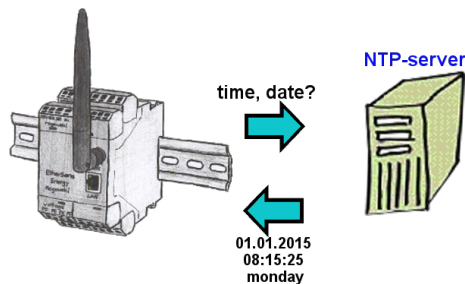

Should all EtherSens devices record time-synchronized in your equipment? By coupling with an NTP-time-server, all devices pick up the current time and adjust this.