

Under the web-address <https://www.process-informatik.de> are product specific documentations or software-driver/-tools available to download.  
If you have questions or suggestions about the product, please don't hesitate to contact us.

Process-Informatik Entwicklungsgesellschaft mbH

Im Gewerbegebiet 1

DE-73116 Wäschenbeuren

+49 (0) 7172-92666-0

[info@process-informatik.de](mailto:info@process-informatik.de)

<https://www.process-informatik.de>

**Menutree Website:**


- + Products / docu / downloads
- + Accessories
  - + Various PLC-/Panel-connection-cable
  - + S5-cable

**QR-Code Website:**



Please make sure to update your drivers before using our products.


## Interface for Mitsubishi Melsec Fx- & A-series

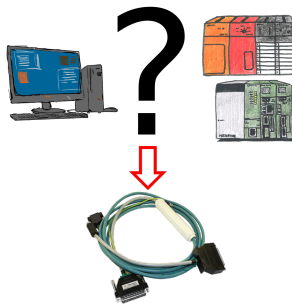

Changes to Mitsubishi PLCs but no interface cable?


Use the SC09 cable to connect the PC to the Mitsubishi MELSEC FX & A series. Any PLC with an RS-422 interface can be connected. Including adapter cable for 8-pin DIN connection, firmly attached so that it can never be forgotten. One cable for both types, universal to the Mitsubishi PLC.

## Data backup S7-PLC over MPI/Profibus on SD-card via dig. IO

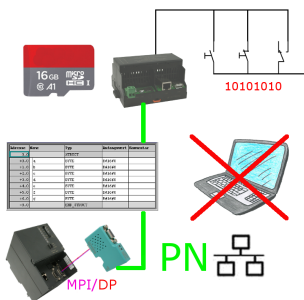

Via digital input triggered DB-backup/-restore without additional PC via MPI/Profibus to SD-card

## Interface-switch for PD/PC

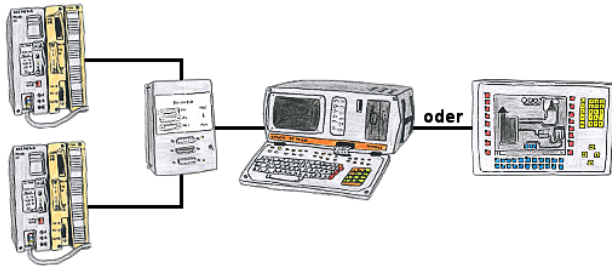

You have to work with more PLC-devices, but no pleasure to switch on/off? No problem, you connect a device of the AG-Switch-family to the PLC-devices and your PD/PC and you will be able to communicate to both PLCs. The selection which PLC you make for AG-Switch-I via toggle switch and for the AG-Switch-II via 24V-controll input.

## Without LAN-cable round of the PLC



You're right in the middle of your production line and should move around the machine and simultaneously observe / manage. No problem, you parameterize the S7-WLAN-Bridge, connect to the MPI-LAN and connect to an access-point or with the ad-hoc-network of your laptop and are ONLINE on the PLC.

## Sending ASCII-data to a PC



Your car park or control sends the configuration / capacity utilisation to a PC with a modem, so that the data can be used for further processing.

## Remote-maintenance Pilz-PLC



Remote-maintenance of a Pilz-controller with network-connection via secure VPN-tunnel of the TeleRouter