Under the web-address https://www.process-informatik.de are product specific documentations or software-driver/-tools available to download.
If you have questions or suggestions about the product, please don't hesitate to contact us.

Process-Informatik Entwicklungsgesellschaft mbH
Im Gewerbegebiet 1
DE-73116 Wäschenbeuren
+49 (0) 7172-92666-0


info@process-informatik.de
https://www.process-informatik.de

Menutree Website:

+ Products / docu / downloads
  + Hardware
    + Analysis technic
      + Oxygen-Service-Controller PS
        + Oxygen-Service-Controller PS CS


QR-Code Website:






Please make sure to update your drivers before using our products.

Message dispatch from the PLC

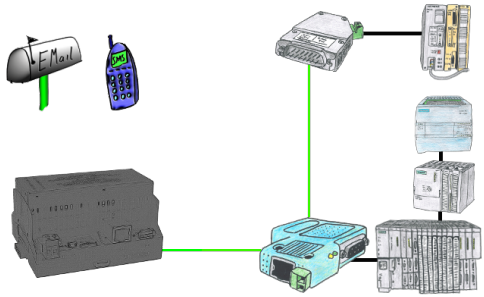


Send directly from your PLC news, statuses, alarms as SMS or email.

Watching of S5- PLC’s with panel for S7-PLC

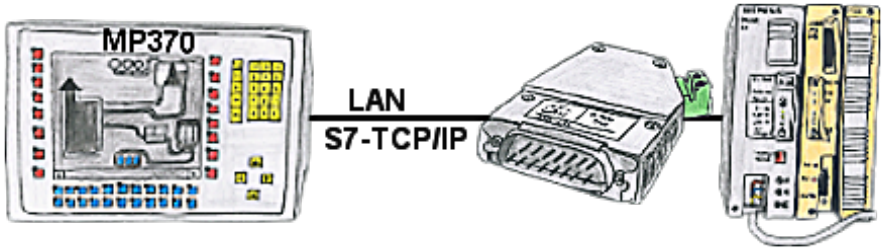

Your panel only has a LAN-socket as PLC-interface and supports only S7-RFC1006, no problem. Connect this socket with the S5-LAN++ and plug it directly on the PD-interface of the PLC. The S5-LAN++ performs adverse your panel as a S7-PLC although you receive the data from the S5-PLC. Then access to the variables and data of the S5-PLC is already available.

Automatical backup of your PLC

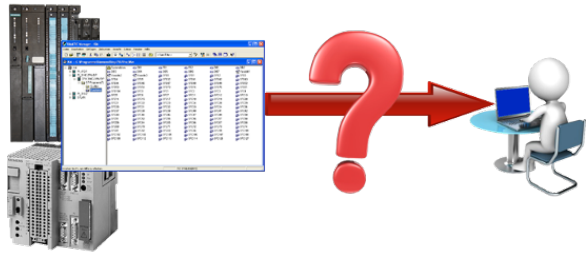

Guaranteeing security against production-downtimes through regular backups of S5- or S7-PLCs on your PC. S5/S7/H1-backup/restore-software saves all projected controls at a predetermined time. Whether every minute, hourly, daily, weekly or once a month, the PLC is completely read out and saved on the hard-disk/network-drive of the computer.

If the backup-battery fails or the PLC is damaged, you can use this backup-file to restore the PLC.

Wireless around the Mitsubishi-PLC




Move wirelessly around the Mitsubishi-PLC and communicate for example ONLINE in the status

Wireless around the Pilz-PLC



Move wirelessly around the Pilz-PLC and communicate for example ONLINE in the status

Passive PoE

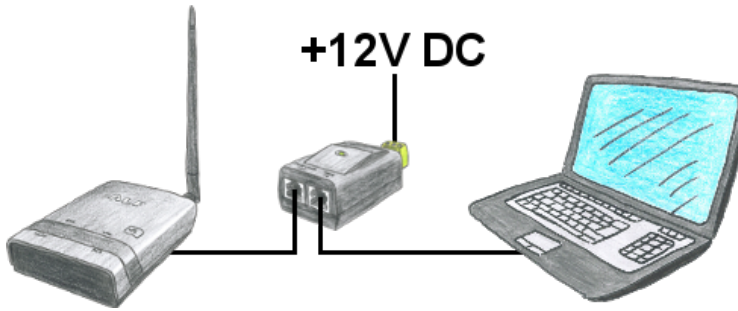

You dont want to power ALF with 24V DC because you have in your network PoE "Power over Ethernet" in use. No problem, ALS provides passive PoE, this means he can be powered with the not used cables of the lan-cable with 12V DC. You dont need additional the 24V DC.

Attention:Dont connect a PoE-cable to a lan-client which dont provides PoE! The device could be damaged!