



handling-short instruction for Multi- Prommer V1.3

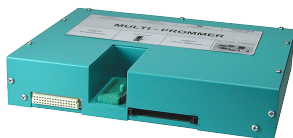


Interface-Overview:

Front-Side:

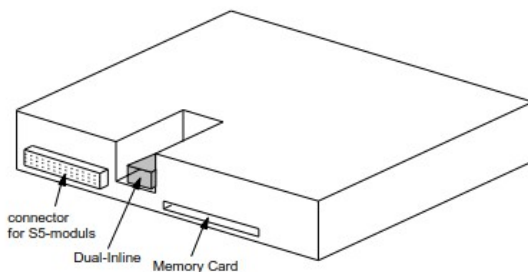

Back-Side:

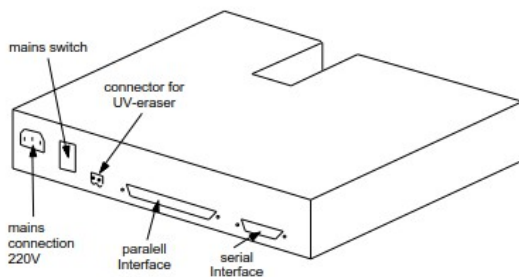

Connectors:

RS232:

The 9pin female Connector has following pining:

Pin	short name	Description
2	RxD	receiver PC-side
3	TxD	transmit PC-side
5	GND	ground signal
7	RTS	request to send
8	CTS	clear to send

Parallel-Interface:

Pin	short name	Description
1	ACK	acknowledged
2	D0	data bit 0
3	D1	data bit 1
4	D2	data bit 2
5	D3	data bit 3
6	D4	data bit 4
7	D5	data bit 5
8	D6	data bit 6
9	D7	data bit 7
10	STB	strobe
11	INIT	initialize
12	AFD	append auto-form-feed
13	SLIN	selection input
14	PE	paper empty
15	ERR	error
16	BUSY	busy
17	SLCT	select
18 – 25	GND	ground signal

Power Supply:

The Multi-Prommer needs a power supply of 230V AC with a tolerance of $\pm 15\%$. The connection should be made with the delivered cable. The Multi-Prommer is also reachable with 115V AC, ask your dealer.

Software-installation:

Download the WinPROMM-software from the mentioned website and start the installation. Follow the Install-Shield.

Menu-structure:

File	New
	Open
	Save
	Save As
	Printer configuration
	Exit
View	Toolbar
	Status line
Module	Select
	Read
	Write
	Write too
	Blanktest
	Compare
	Block list
	Erase
Configuration	Interface
	Language
	Word/Block
	SYSID
	Display checksum
Window	Overlapped
	Side-by-side
	Top-on-top
	Group symbols

Help	Contents
	Usage of help
	Introduction
	Version-history
	About WinPrommer
Block	All
	None
	Exchange

File-formats:

.	All Files. It is tried to choose a file-format according the extension. If no appropriate file-format is found, the binary format is used
*.BIN	Binary File
*.S5D	Step-5 File
*.S7P	Step-7 File (structure)
*.308	ET-100 File
*ET.200	ET-200 File
*.2BF	ET2-Binary Export
*.HEX	Intel-Hex-Format
*.EPR	Motorola-Hex-Format
*.525	CP-525/524 Files
Q*.*	CP-5431 File
A*.*	CP-1430/CP-143 File

Technical data:

Size (S x H x D):	245 x 47 x 187mm
Case-Type:	metal casing, powder-coated

For more Information of the Multi-Prommer or to get the actual Manual or the actual operating software WinPrommer, you find the information under

Under the web-address <https://www.process-informatik.de> are product specific documentations or software-driver/-tools available to download.
If you have questions or suggestions about the product, please don't hesitate to contact us.

Process-Informatik Entwicklungsgesellschaft mbH
Im Gewerbegebiet 1
DE-73116 Wäschenbeuren
+49 (0) 7172-92666-0
info@process-informatik.de
<https://www.process-informatik.de>
Copyright by PI 2003 - 2024

Menutree Website:


- + Products / docu / downloads
- + Hardware
 - + Memory modules / Prommer
 - + MULTI-PROMMER



Please make sure to update your drivers before using our products.

Active on every S5-PLC

~~Current Source 20mA~~
~~Voltage +5V / +24V~~



PLC's without current-sources (+20mA) and voltages (5V/24V) at the PG-interface such as the AS511-plug-in card?

The PG-USB-cable does not need anything, it is supplied directly from the USB-socket to which it was plugged. It is active towards its communication-partners, contains its own current-sources.

Universally connected to the S5-PLC without worrying about the supply. Function also given on controls with current-sources/voltages.