

# Handling-Short Instruction for

## MESSI NG 2G / 3G V1.0



The Messi is a fault-messenger which sends its fault-messages via the GSM-network. As a result, it is not affected by german telekom's switch to the digital telephone-network.

### Power Supply MESSI

Connect the following voltage to input terminals 41 and 42:

Terminal 41: +12V DC up to +24V DC

Terminal 42: 0V

Terminal 43: can be used as replacement-supply with accu-pack . Read more in the device-manual.

*Software drivers do not need to be installed.*

### Configuration of MESSI

All data and parameters which are necessary for the operation of MESSI NG are entered via the web-interface. Please use Mozilla Firefox browser to configure the web-server.

Microsoft Internet-Explorer is not suitable for this configuration.

### Preparation

Connect the MESSI NG to your PC or to your existing network with a network-cable. If the control-lamps on the network-socket do not light up, you have to use a crossover-network-cable.

The IP-address of MESSI NG is shown in the display. If necessary, change the IP-settings of your PC so that it is in the same subnet as MESSI NG.

If MESSI NG has the IP address:

192.168.1.200 (factory-settings),  
please set up your PC, for example to 192.168.1.3.

You can open the web-interface of MESSI NG with <http://192.168.1.200>. The web-interface transfers only the absolutely needed data, so a smooth processing of programming is possible. After entries on the configuration-pages, please use the save-button to store this settings. Please don't use the back- and forward buttons of the browser.

The browser must allow the processing of javascript.

## Country-specific settings for the cellular network

Due to the technical development of the cellular network, some existing cellular standards will no longer be available.

Unfortunately, the dismantling is carried out according to different guidelines in the individual countries.  
The 2G network has not been available in Switzerland since 2020.

The 3G networks in Germany will be switched off in the course of 2021.

Depending on where the MESSI NG 3G is used, this requires differentiated settings.

These are to be set in the “General Settings” (see also chapter “4.3.1 General Settings” in the manual) under “Network Type”.

### For use in Switzerland:

Here the MESSI NG 3G must be set to the 3G network:

**Network Type:** 3G

### For use in Germany:

Here the MESSI NG 3G must be set to the 2G network:

**Network Type:** 2G

Under the web-address <https://www.process-informatik.de> are product specific documentations or software-driver/-tools available to download.

If you have questions or suggestions about the product, please don't hesitate to contact us.

Process-Informatik Entwicklungsgesellschaft mbH

Im Gewerbegebiet 1

DE-73116 Wäschchenbeuren

+49 (0) 7172-92666-0

[info@process-informatik.de](mailto:info@process-informatik.de)

<https://www.process-informatik.de>

Copyright by PI - 2026

## Menutree Website:

- + Products / docu / downloads
- + Hardware
- + Error messaging
- + MESSI NG 3G




## QR-Code Website:




Please make sure to update your drivers before using our products.

### Data logging of your PLC

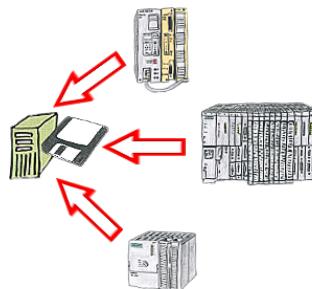


You shortly need a logging of your PLC's operating states respectively are on the way of figuring out a problem and have no datalogger? No problem, connect the PC, start the PG-2000-software with "option datalogger", define relevant variables, appoint timestamp and then the recording starts running immediately. The data will be stored on the fixed disc according to the configuration.

## Router - Mode (access to the network without router)

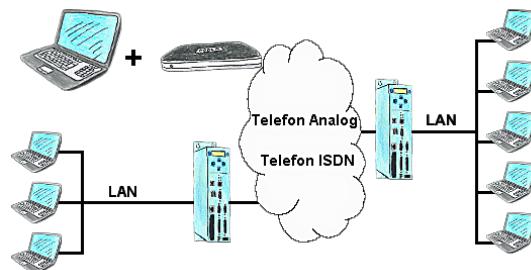

The Tele-Prof-II can also be used as a router for access from a PC via dial-up connection, so that a communication with the behind covered network results. Furthermore a network connection can be made with the TP-II TP-II-line, but in doing so the IP-address-root must differ.

## Failure report transmission released by the PLC

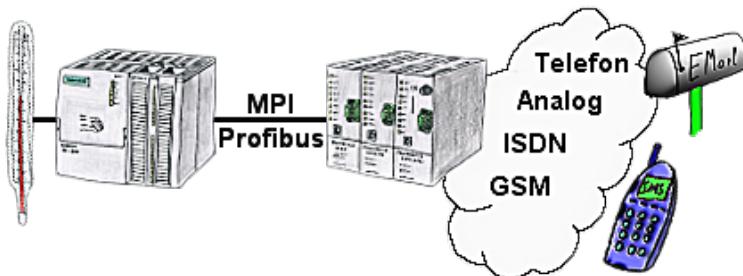

Your outstation reports the current value cyclically, or in case of malfunction the status via FAX, as SMS to your mobile phone, to your pager or also via e-mail.