
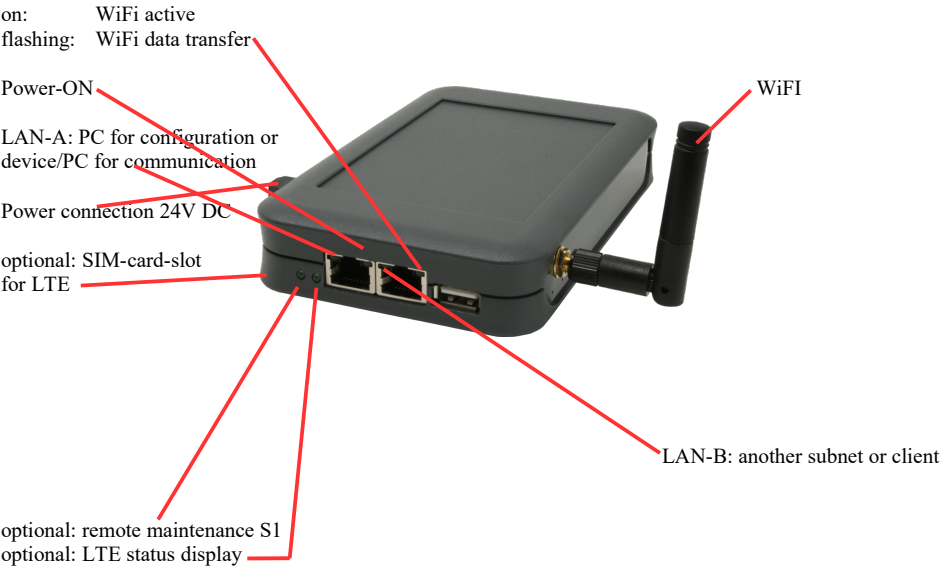


# Handling-Shortinstruction V1.0 for CONNECT-IP-Switch


**Connectors:**

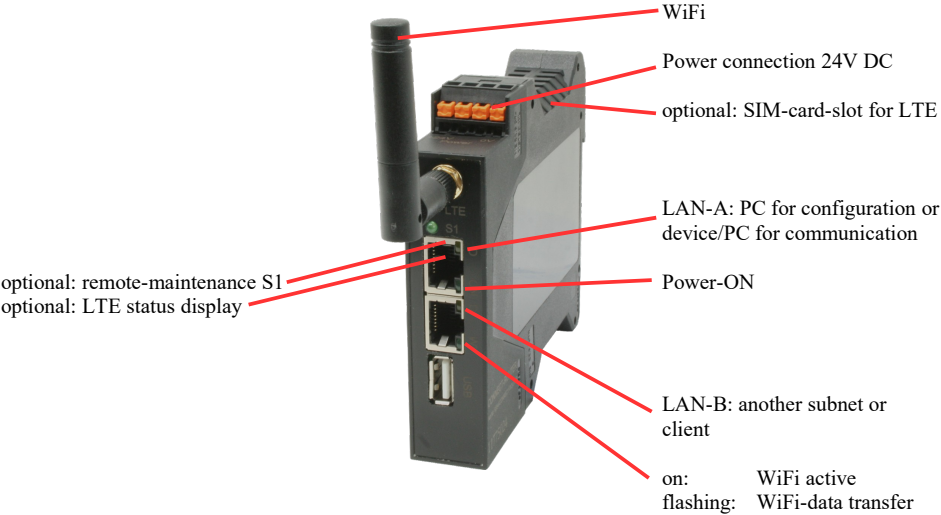

## Power connection :

Voltage: 24 V DC  $\pm$  20%  
power consumption : 1,2W

## Assignment of voltage plug :

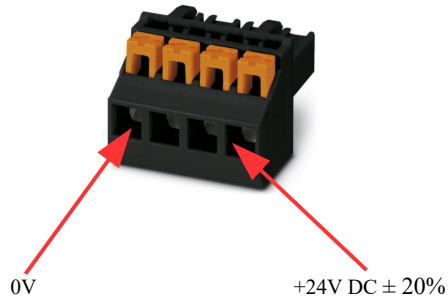

## Initial start-up:

- CONNECT-IP-Switch creates a WLAN network with an SSID „CONNECT WiFi“ with active DHCP master (laptop is automatically assigned an IP address)
- Connect laptop to this WiFi network and open with browser webserver with IP: <http://192.168.2.1>

or

- Connect the PC to the LAN port using a LAN cable
- PC must be in the 192.168.2.xxx subnet

## Starting page:

**commissioning**  
Before you can start to use the device you will have to set up some basic settings. Afterwards your device will be immediately ready for the communication.  
On the page "configuration" you can change these as well as some further settings at any time.

**basic configuration**  
In the first step you have the possibility to specify a name for your device.  
device name:

next

## Basic configuration:

Assign a name to the device for identification

Connection to company network:

**Internet configuration**

Next you have to configure how your device should establish a connection to the internet.

router interface: LAN-A ▾

**IP settings**

IP configuration: ☐ DHCP  
☒ manually

IP address:

subnet mask:

gateway address:

### Internet-configuration:

Determine the interface to which the target network is connected

### IP settings:

- IP-configuration: DHCP (Parameters come from a DHCP master on the network)  
Manuell (IP address + subnet mask fields must contain valid values)
- IP address: IP address of the device
- subnet mask: Subnet mask of the device
- gateway address: Gateway address of the device

**WLAN settings**

search:

SSID:

security type: open ▾

channel: auto channel ▾

### WLAN settings:

- Search: Searches for accessible WiFi networks and lists them. By clicking on an entry, the selected WiFi network is used for connection
- SSID: Name of the connected or created network
- security type: Open (no encryption)  
WEP (either 5 or 13 ASCII/10 or 26 hexadecimal characters)  
WPA (8-64 ASCII characters)  
WPA2 (8-64 ASCII characters)  
WPA/WPA2 8-64 ASCII characters (Independent automatic selection whether WPA or WPA2)
- channel: Selection of the connection channel

## Peripheral configuration:

Interface: Determine the interface that is to be connected to the machine network

**peripheral configuration**

In the last step you can select the interface and configure the addresses for the devices (e. g. from a PLC) who should be reachable from the router interface.

interface:

**IP settings**

IP configuration: ☐ DHCP  
☒ manually

DHCP server: ☒ enable

IP address:

subnet mask:

## IP settings:

- IP configuration: DHCP (Parameters come from a DHCP master on the network)  
Manuell (IP address + subnet mask fields must contain valid values)
- DHCP-Server: Device is a DHCP server on the selected interfaces
- IP address: IP address of the device
- subnet mask: Subnet mask of the device

**WLAN settings**

search:

mode:

SSID:

security type:

channel:

## WLAN settings:

- search: Searches for accessible WiFi networks and lists them; by clicking on an entry, the selected WiFi network is used for connection
- mode: Access-Point (AP) [the CONNECT-IP-Switch opens its own WiFi]  
Client [the CONNECT-IP-Switch connects to an existing WiFi network]
- SSID: Name of the connected or created network
- security type: Offen (no encryption)  
WEP (either 5 or 13 ASCII/10 or 26 hexadecimal characters)  
WPA (8-64 ASCII characters)  
WPA2 (8-64 ASCII characters)  
WPA/WPA2 8-64 ASCII characters (Independent automatic selection whether WPA or WPA2)
- channel: Selection of the connection channel

**IP-Switch configuration:**

Determine the IP addresses or IP address ranges that are to be converted from the machine network into the company network.

IP-SWITCH

network bridge: ☒ enable

IP translations: +  <>

IP firewall: +

- network bridge:

With this option, all IP packets from the company network to the machine network and vice versa are pushed through the CONNECT-IP switch, except for the packets for IP address translation is registered.  
This option must be deactivated to ensure strict separation of the machine network and the company network!
- IP translation:

left field: IP address from the machine network that is to be implemented

right field: Converted new IP address from the company network
- IP firewall:

The line is accepted with the + symbol and further conversion can be entered  
Here you determine whether and which IP addresses from the machine network are allowed to communicate with the company network

After selecting the configuration, save it in the device and after a short initialization time (max. 10s) the devices are ready for operation.

You can find out more about the operating modes in the device manual on the CONNECT-IP switch product page

Under the web-address <https://www.process-informatik.de> are product specific documentations or software-driver/-tools available to download.  
If you have questions or suggestions about the product, please don't hesitate to contact us.

Process-Informatik Entwicklungsgesellschaft mbH

Im Gewerbegebiet 1

DE-73116 Wäschenbeuren

+49 (0) 7172-92666-0

[info@process-informatik.de](mailto:info@process-informatik.de)

<https://www.process-informatik.de>

Copyright by PI 2024 - 2025

**Menutree Website:**


- + Products / docu / downloads
- + Hardware
  - + Remote maintenance
  - + S5
    - + Internet
    - + CONNECT devices
    - + CONNECT-IP-Switch

**QR-Code Website:**




Please make sure to update your drivers before using our products.

## S7-CP-replacement (without LAN-CP to the PLC-device)

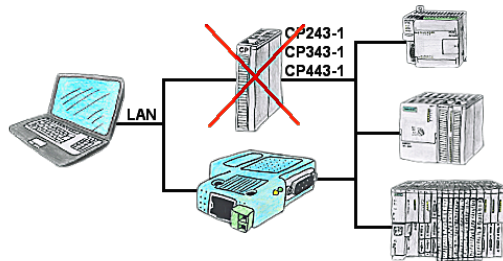

Do you have a S7-PLC-device without CP243-1, CP343-1 or CP443-1 and would like to connect via LAN? Then plug the S7-LAN on the PLC-device and your access via RFC1006 is ready for use.

## Worldwide remote-access thanks to our own cloud

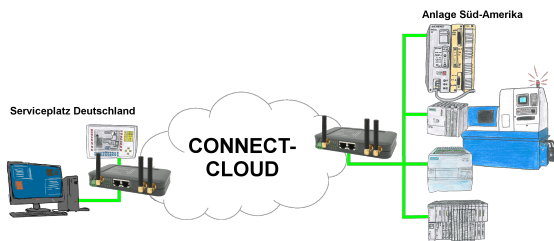


Worldwide remote-maintenance without additional costs thanks to our own cloud

Your devices connect to your own cloud, no matter where they are in the world. Only your devices are in your own private cloud, no one else has access to the cloud. In addition, you can provide each device with its own connection-password, so that the individual systems are protected despite the private cloud.

No registration on any portals, no hidden additional costs, your devices in your own cloud are always accessible.

This is how remote maintenance/remote access is fun.

## S7-PLC and serial ASCII-data

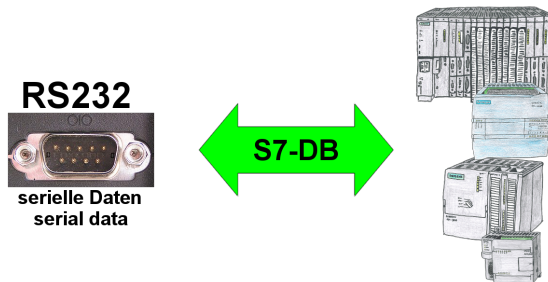


S7-PLC should process serial ASCII-data from another/external device and send back the corresponding data?

"RS232 on S7" receives this serial data and transfers it to a data-block of your choice specified in the configuration. The S7-PLC can then process the data received in this way and send back an answer via a data-area that is also defined.

The baud-rate of the serial line can be freely selected. This allows communication with the ASCII-transmitter to be implemented, with the S7-PLC using the two specified data-areas as input-/send-compartments.

## Serial communication to the S5-PLC

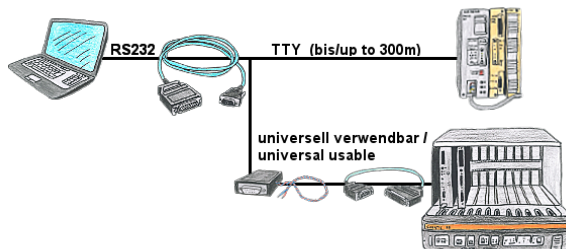

Universally to the S5-PLC, free 9-pin COM-port is sufficient on the PC and free PG-port on the PLC.

No external supply necessary as long as PLC offers current-sources on the PG-interface. Distance to PLC up to a maximum of 300m over 4-wire connection. Each S5-PLC can be connected, also 25-pin AS511 plug-in-card (S5-150U) via net-adaptor and AG-150-adaptor.